


Automatic Watch Winder Instruction Manual

CONNECT THE POWER SOURCE


Connect the AC power adapter to the wall socket and insert the DC power plug into one of the DC jacks on the winder back. Two DC jacks on the back function identically. One works for power receiver while the other works as power provider to the neighbor winder.

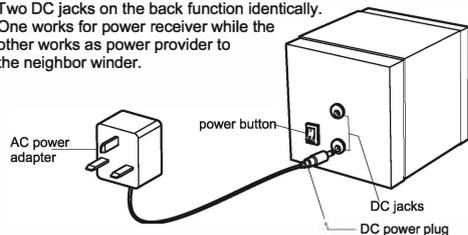

Note: Disconnect the AC power adapter when the winder is not in use.


TAKE OUT THE WATCH HOLDER FROM THE WINDER

Slightly squeeze and pull to detach the watch pillow from the rotor.

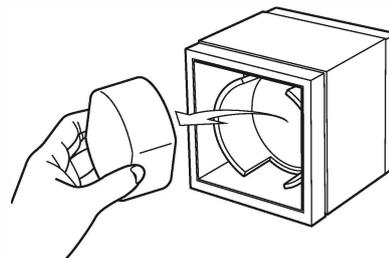

LOADING THE WATCH ON THE WATCH PILLOW

Squeeze the watch pillow to a suitable size to fasten the watch on it.

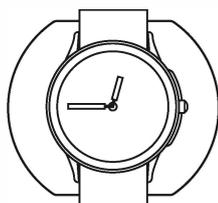


horizontal pillow
for small watch




vertical pillow
for big watch

loading the watch
on the pillow

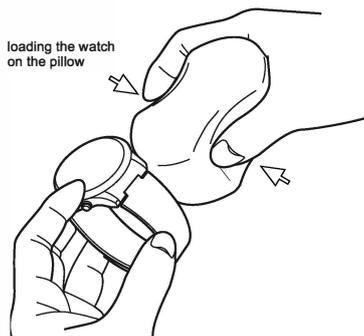


RELOAD THE WATCH AND THE WATCH PILLOW TO THE WINDER

Carefully press and fit the watch pillow to the rotor.

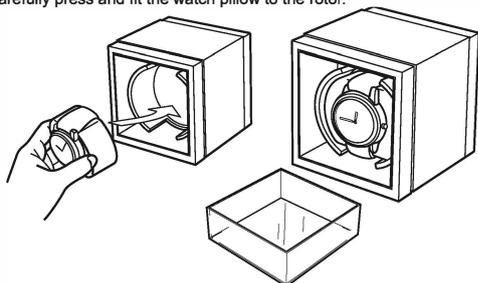

TURN ON THE POWER

Press the power button on the back to turn on the watch winder and start winding your watch.

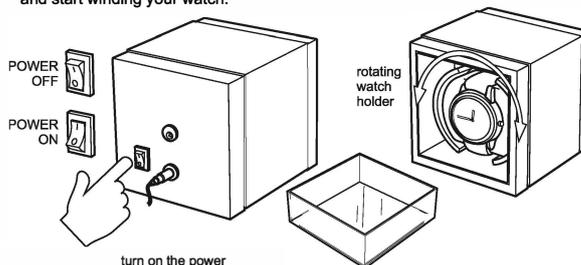

MODES OF WINDING


The winder works in a default winding program (TPD 950):

counterclockwise turning for 1 minute, then immediate clockwise turning for 1 minute, then pause for 26 minutes, and then repeat the turning cycle until you turn off the power.



UPRIGHT POSITIONING


The watch will return to the starting upright position at any resting time and before power off.

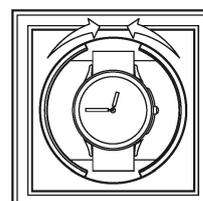

Note: upright positioning does not function when AC power is disconnected.

MODULAR SYSTEM

The winder can work as a single unit or as a modular system capable of building up to 12 units. To power up all units in the modular system with one AC adapter, plug a connection cord to a DC jack at the back of one unit to another. DC power supplies parallel to every unit.

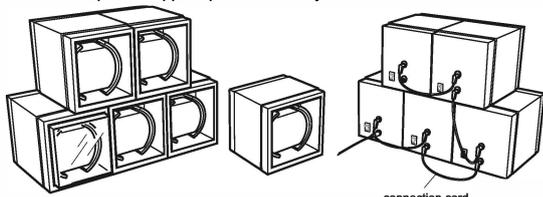

Note: Both DC jacks on each unit back work identically.

MAINTENANCE

DO NOT ROTATE THE WATCH WINDER HOLDER BY HAND!
This will cause the gearing to fail and Invalidate your warranty.

Do not expose the watch winder to direct sunlight, extreme temperatures, water, or other moisture which may damage the winder.

Clean the winder surfaces with the microfiber pouch that comes with the package.

Do not use solvent-based cleaning agents.

Please do not open the watch winder or attempt to repair it.